



iLens | model: IL01

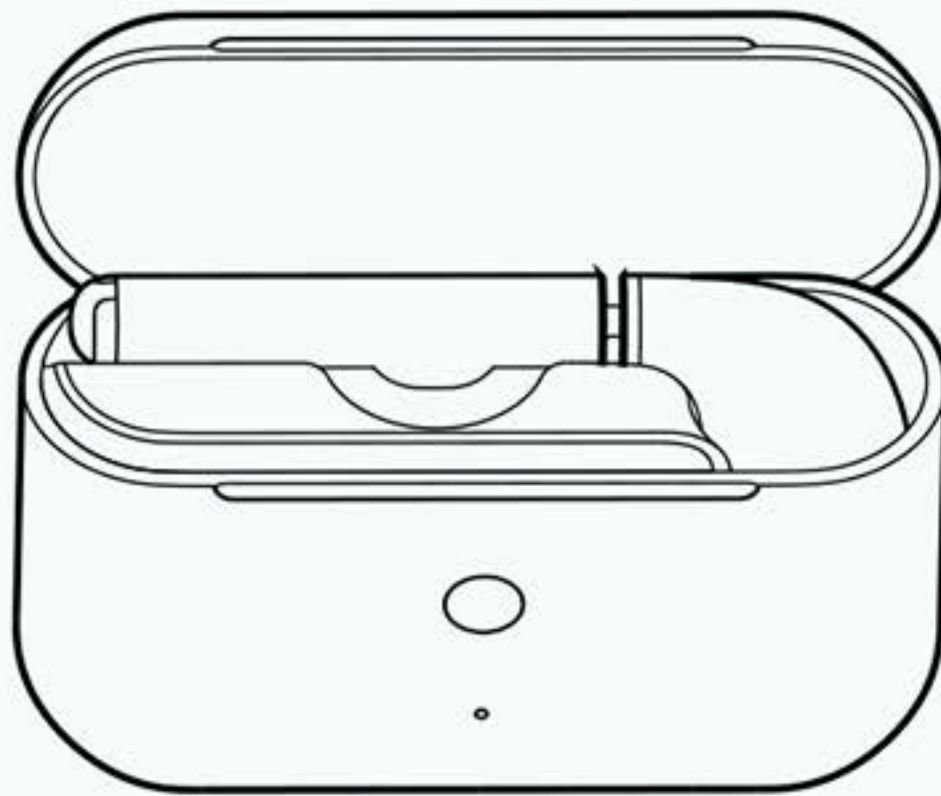

Smart AR HUD Glasses


-English-

Product Description

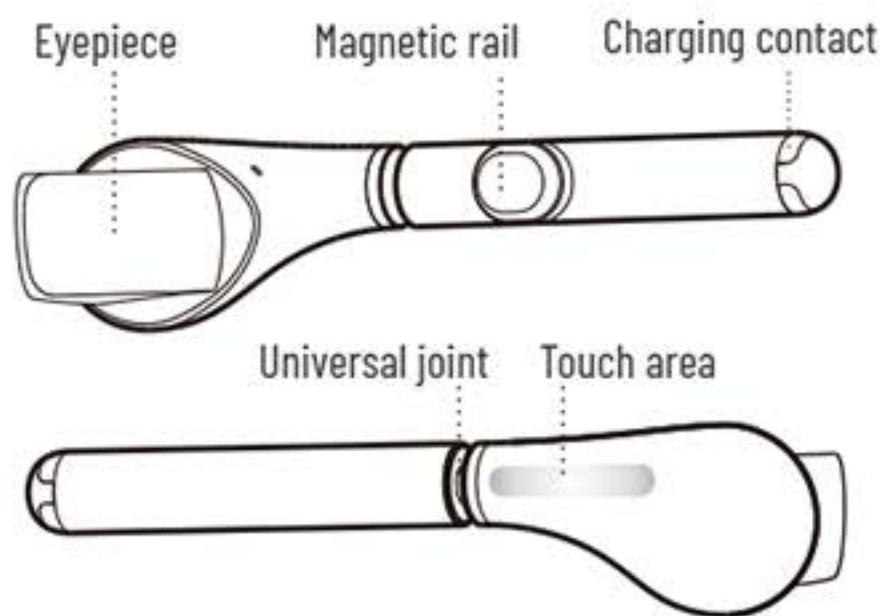

Touch Area Description

Single click/slide back: next page
Double-click/slide forward: previous page

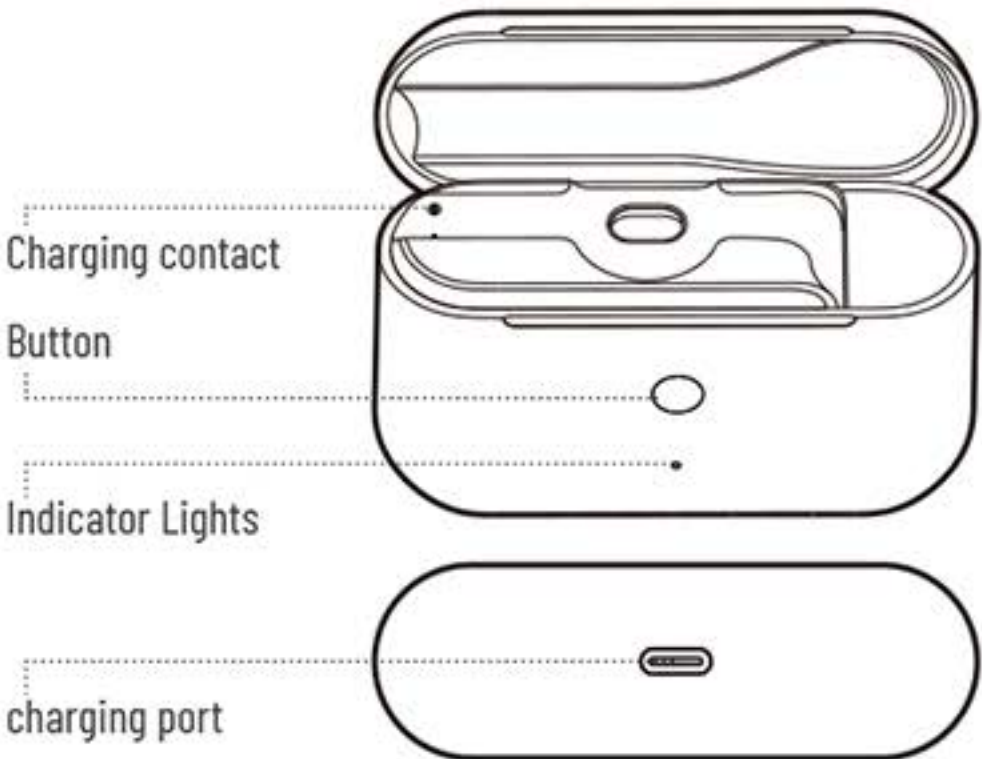


Indicators Status Description

Lid Open:
Green: Normal battery level
Red: Low battery
Blinking White: Firmware upgrade in progress
Blinking blue: Bluetooth pending pairing

Charging Status:
Indicator light blinking: charging
Indicator light stays on: fully charged

Attachment List

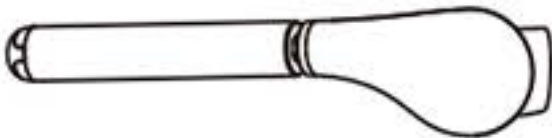

Eyewear




Charging Case



Charging cable



Straps (2 each for Long, Medium & Short)

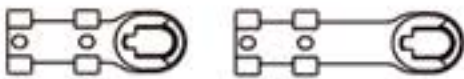


Bases (Long&Short)




User manual

Wear and Installation

ilens should be used in conjunction with your eyeglasses.

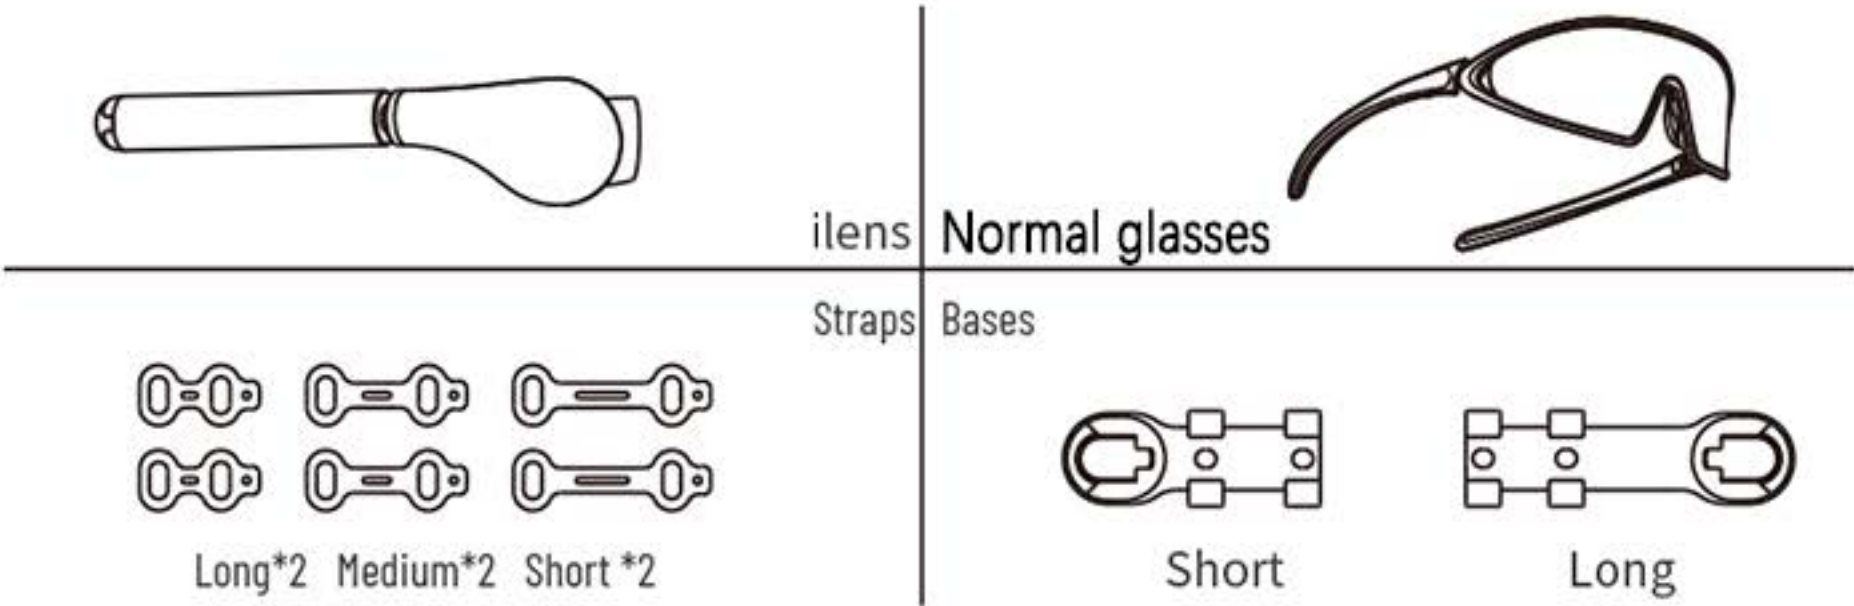


Installation:

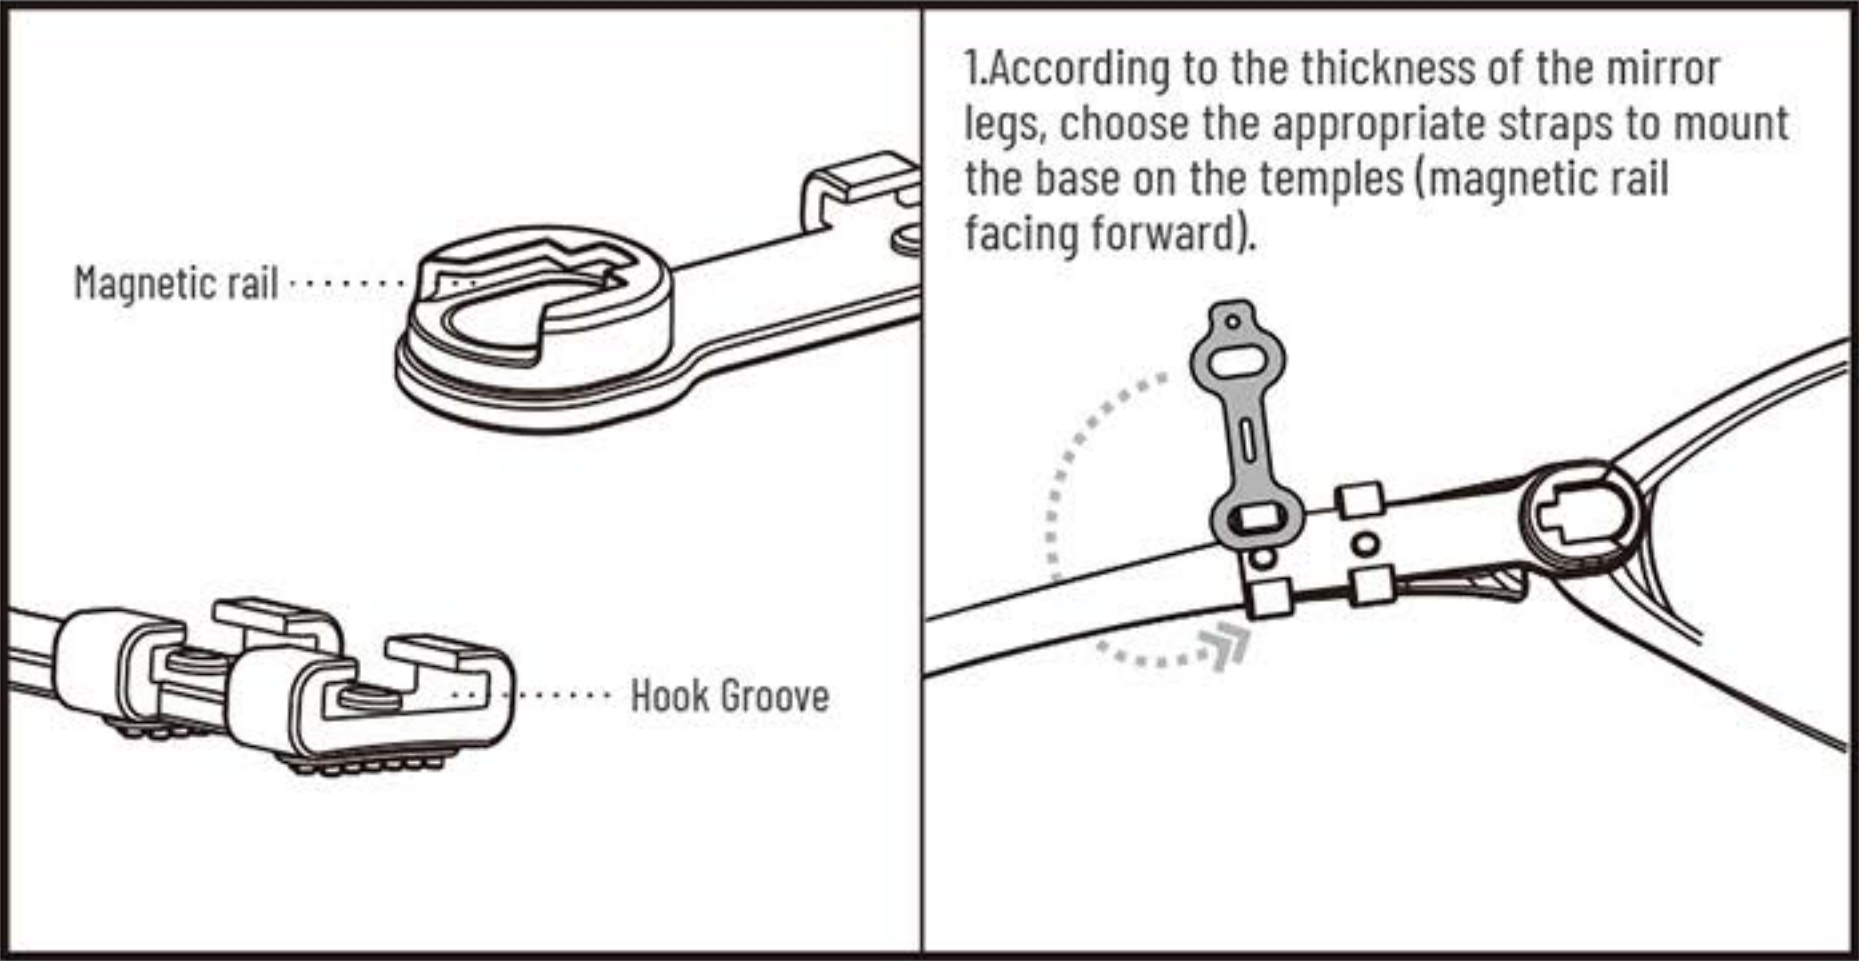


2. Take out the **ilens** from the charging case, align the magnetic rail, and slide backwards.




3. Adjust the mount position, so the **ilens** eyepiece is close to the glasses lens.

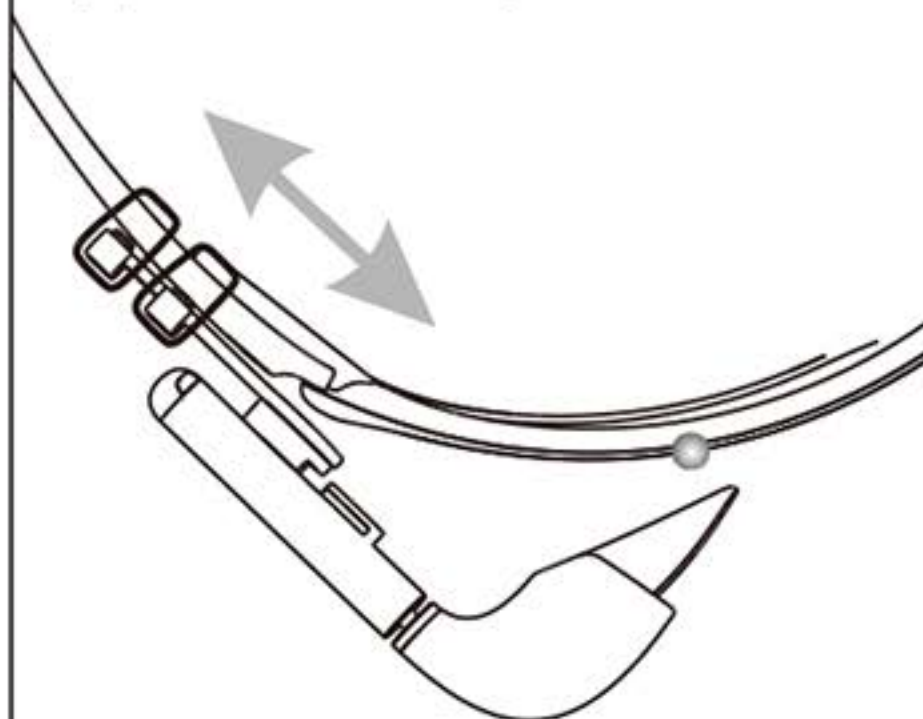

4. Put on the glasses, adjust the universal joint in all directions slightly, until the display in the eyepiece can be seen clearly.

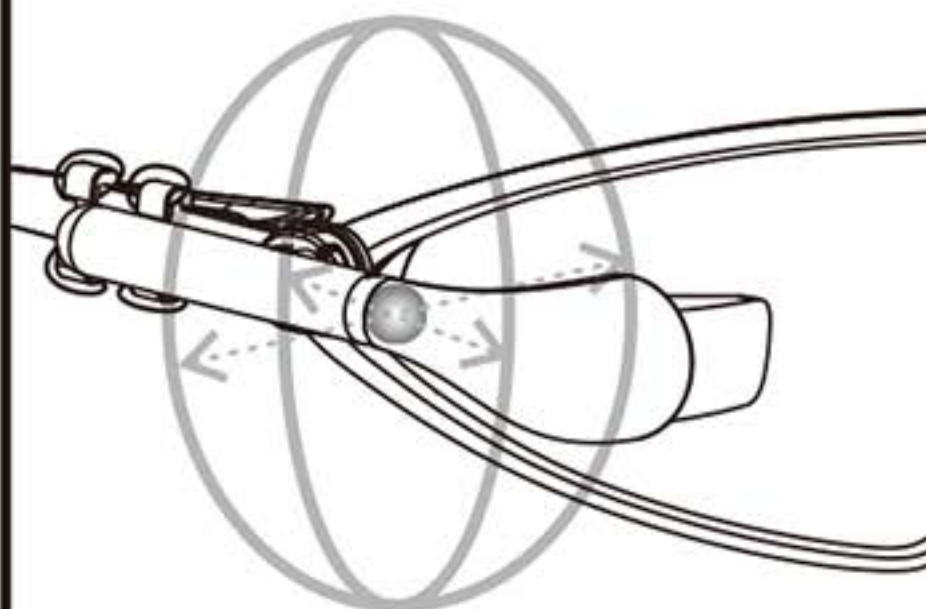

5. Adjustment is completed, the eyepiece will display "Awaiting connection".

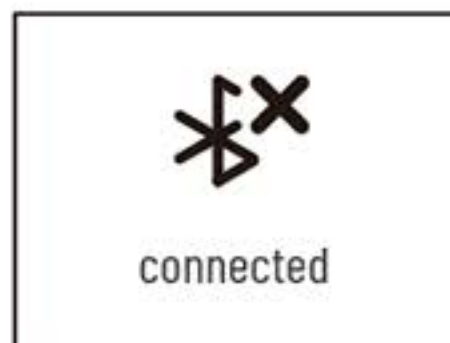

6. Connect the **ilens** App to start using.
(**ilens** App->Devices->Goggles)

App Download

This product needs to be used in conjunction with the smartphone APP to experience the relevant functions.

Scan the QR code to download and install to discover more.



IOS



Android

Instructions

First time use

You need to place **ilens** in the charging compartment, press and hold the button for 2 seconds and see the indicator light flashing blue to enter pairing mode.

Switch on/off

Take the **ilens** out of the charging case, the screen will light up automatically; put the **ilens** back to the charging case, **ilens** will automatically shut down and enter the charging mode.

Restore factory settings

Put the **ilens** glasses into the charging case, press and hold the button for 7 seconds with the lid open, The indicator light blinks white 6 times, the **ilens** is restored to factory setting.

Charging

Please use USB Type-C 5V/2A charging cable to connect to the charging case, the indicator light blinks to enter charging mode.

Warranty and Cleaning

Eyepiece lenses are optical parts, please use eyeglasses cloth to wipe the eyepiece lenses, please place the **ilens** in charging case when storing to avoid damage; please do not over-adjust the universal joint.

Precautionary Note

1. This device may emit radio waves, which may interfere with the normal operation of some medical devices, including but not limited to pacemakers, hearing aids, etc. Please consult with the manufacturer of the medical device or your physician before using this product.
2. Please use this device in an environment of 0 °C to 35 °C and store this device within the range of -20 °C to 40 °C.
3. Do not expose this device to excessive temperatures or around hot equipment. An overheated battery may cause fire, explosion, or other hazards.
4. This device contains a lithium-ion battery, do not disassemble the product or replace the battery by yourself.
5. The input power of this device is 5V/2A. Please make sure to charge within this range, incorrect charging may cause battery damage.
6. Do not disassemble, hit, crush, soak the product or battery, or dispose of the battery in fire.
7. Do not short the product's connector or expose it to external conductive media such as metal or liquid.
8. If the battery swells, stop using the device immediately and contact the after-sales service.
9. Please follow the relevant laws and regulations, pay special attention to the storage and use of this equipment in the following environments:
 - Strictly prohibited in the storage of flammable and explosive oil and gas or chemical environments (such as gas stations, chemical plants) to use this equipment.
 - It is strictly prohibited to use this equipment in extreme weather conditions (e.g. thunderstorms, etc.).
 - It is strictly prohibited to use the device while driving. This equipment may also cause interference with electronic devices in the vehicle.
 - When traveling by airplane, please follow the airline's regulations on the use of electronic devices.
 - Avoid charging this device in high temperature and high humidity environments such as bathrooms.
 - Please comply with all relevant laws and regulations and actual on-site regulations that explicitly prohibit the use of this device in specific environments.

Specifications

Product Name: ilens Smart AR HUD glasses

Weight: 10.1g for single glasses (excluding charging case)

Charging method: TYPE-C , PD charger compatible

Waterproof rating: IP65

Operating temperature: -10°C ~40°C

Battery life: 80min (no more than 30% brightness)

Eyewear battery capacity: 70mAh

Charging case capacity: 640mAh

Warranty

Thank you for purchasing our ilens product. The after-sales service policy of the product is effective since the date of purchase, and it has a one-year warranty.

Please contact your original dealer for warranty service.

The following conditions are not covered by the warranty:

- 1.The normal aging and loss of the battery;
- 2.Damage and loss of products due to improper installation;
- 3.Damage caused by abnormal use, such as high temperature, water damage, etc.
- 4.Damage caused by dismantling by yourself or by unauthorized maintenance personnel.

Support

Please access **www.sotech-vision.com** for more product information.

email: service@sotech-vision.com